

Kapture.IO

*Intelligent Quality Management System (QMS)*

Data & Measurement

**Kapture.io**



Sfruttamento delle informazioni

Kapture.io

## Visualizzazione dei dati - Data & Measurement

L'accesso ai dati tramite la sezione Data and measurement può essere effettuato in diversi modi :

1. Accesso tramite il control guide: facendo clic su Data & Measurement.

The screenshot displays the Kapture.io interface for a specific control guide. The top navigation bar includes 'Dashboards', 'Shared with me', 'Reports', 'Control Guides', 'Studies', and 'Kapture Academy'. The main content area is titled 'OP\_50\_Fixture Control' and shows the location as 'Barcelona' and the control guide type as 'FREE'. A red box highlights the 'Data and measurement' tab, which is selected. Below the tabs, there is a 'Control Guide Activity' section with a progress bar showing 23% completion (226 / 1000 samples). The activity is visualized in a calendar grid from October to September, with blue squares indicating activity levels. A legend at the bottom of the grid shows 'Low activity' (light blue) and 'High activity' (dark blue). The right sidebar contains 'Update stats', a smiley face icon, and a 'Support' button.

Sfruttamento delle informazioni

Kapture.io

# Visualizzazione dei dati - Data & Measurement

2. Facendo clic sull'icona della riga nell'elenco dei control guides :

The screenshot shows the Kapture.io interface for 'Control Guides shared with me'. The left sidebar has 'Shared with me' and 'Control Guides' highlighted with red boxes. The main area contains a search bar, 'Print List', 'Columns', and 'Filter by tags' buttons. Below is a table with columns: Name, Reference, Part, Program, Type, Operators, Samples, Last upload, and Actions. Three control guides are listed, each with a red circle highlighting the delete icon in the Actions column.

Name	Reference	Part	Program	Type	Operators	Samples	Last upload	Actions
OP_100_Press Control Cosmetic Control Press Control AF2021	Reference_1_Stamping	Reference_1_Stamping	OP_100_Press Control	FREE	7 / 6	56 / 999999	7/27/22	🔊 📄 🗑️
OP_10_Incoming Incoming Checklist Program Table Webinar_3_Reception Non-conformity AF2021	Reference_1_Plastic	Reference_1_Plastic	OP_10_Incoming	FREE	19 / 23	320 / 1000	9/8/22	🔊 📄 🗑️
OP_50_Stamping Surface Control Cosmetic Control Mandatory Tags Multiple Batches Produced Parts AF2021	Reference_1_Stamping	Reference_1_Stamping	OP_50_Stamping Surfac...	FREE	12 / 7	729 / 1000	6/17/22	🔊 📄 🗑️



## Data & Measurement

Risorse disponibili nell'area di Data & Measurement:


### 1. Filtri:

- All date: Filtrare per intervallo di date.
- Filters:
  - Sample filters: Filtri di stato, batch, utente, azioni, primi o ultimi record, giorno corrente o azione per concentrarsi sulle diverse esigenze dell'analisi.
  - Attributes: Permette di filtrare in base ai diversi attributi presenti nel modello di controllo.
  - Checks: Consente di filtrare in base ai diversi checki esistenti nello schema di controllo.
- Serial No: Consente di filtrare per numero di serie del pezzo.
- Check & check class: Filtrare per controlli specifici o per tipo di controllo.

Questi filtri possono essere combinati tra loro per eseguire una ricerca più specifica dei dati.

Sfruttamento delle informazioni

# Data & Measurement

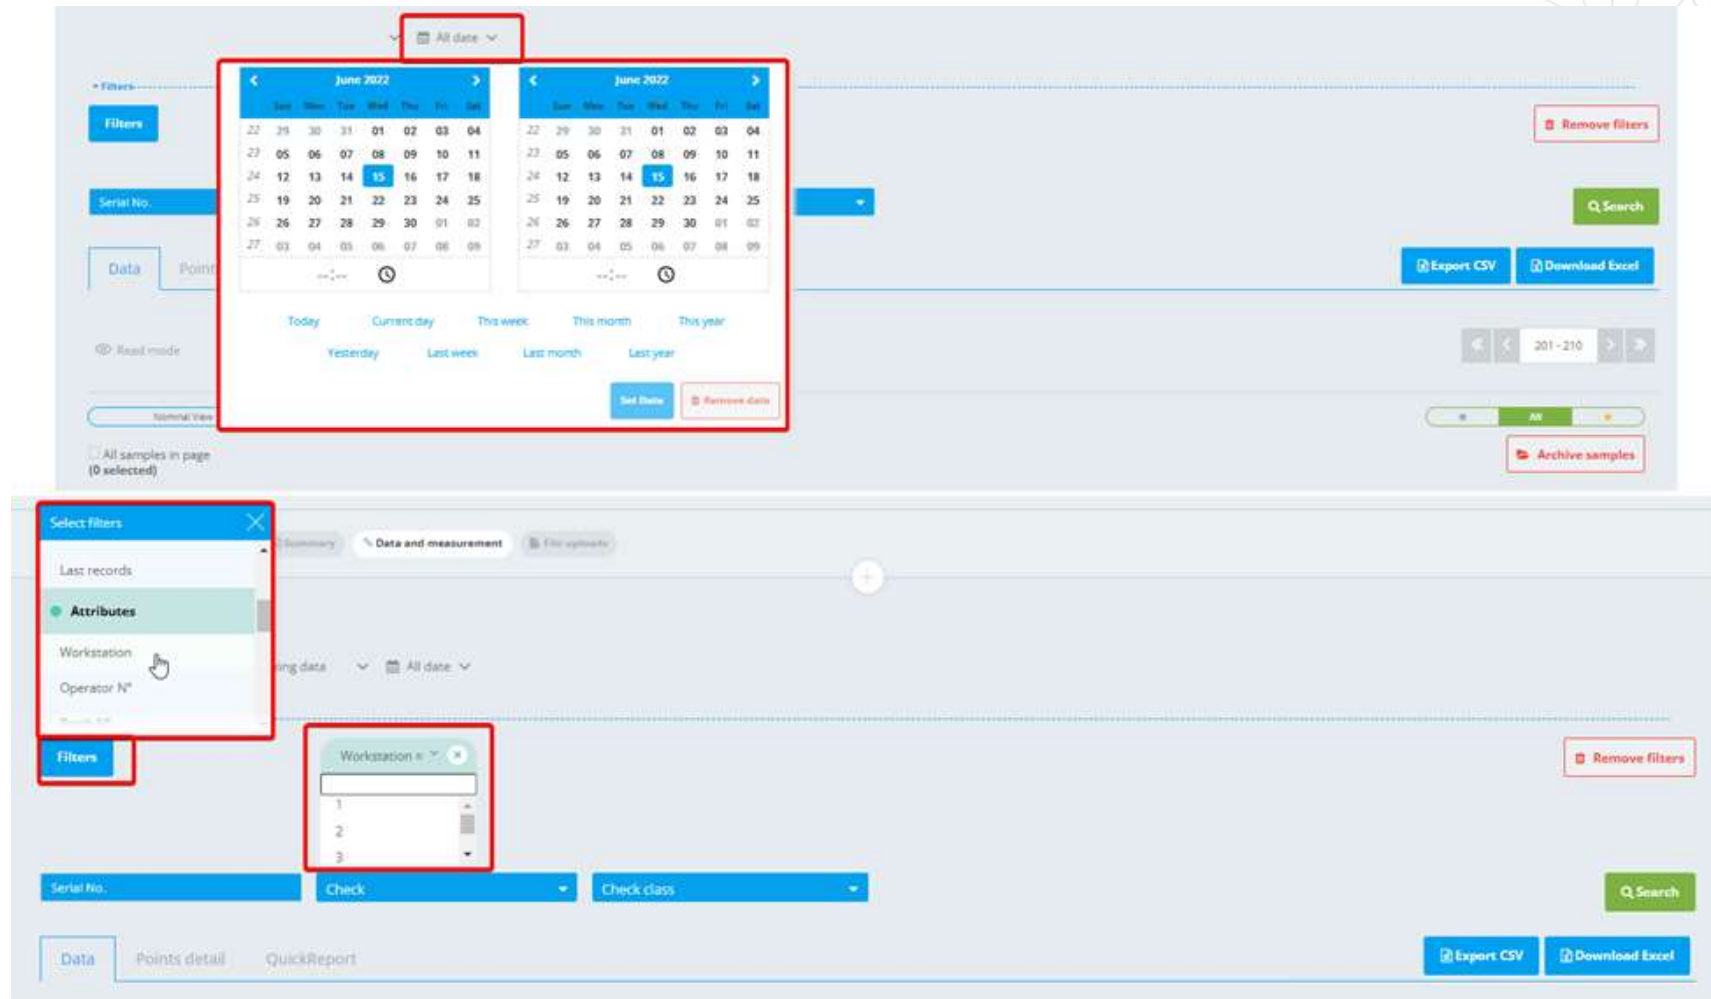

The screenshot displays the 'Data & Measurement' interface. At the top, there are two calendar views for June 2022. The left calendar has the 15th selected, and the right calendar has the 15th selected. Below the calendars are navigation options: Today, Current day, This week, This month, This year, Yesterday, Last week, Last month, and Last year. A 'Set Date' button and a 'Remove date' button are also present. On the right side, there are buttons for 'Remove filters', 'Search', 'Export CSV', and 'Download Excel'. A pagination control shows '201 - 210' and an 'Archive samples' button.

In the lower section, a 'Select filters' dialog box is open, showing options: 'Last records', 'Attributes' (selected), 'Workstation', and 'Operator N°'. A 'Filters' button is located below the dialog. Below the dialog, a 'Workstation' dropdown menu is open, showing options 1, 2, and 3. The main interface also shows a 'Serial No.' field, a 'Check' dropdown, and a 'Check class' dropdown. At the bottom, there are buttons for 'Data', 'Points detail', 'QuickReport', 'Export CSV', and 'Download Excel'.


## Data & Measurement



2. Export data: Consente di esportare i dati in Excel o CSV (disponibile solo se il modello non ha controlli cosmetici).
  - CSV
  - Excel
3. Remove filters: Rimuovi tutti i filtri applicati.
4. Data Analysis:
  - Data: Qui si trovano tutti i dati di misura, i dati degli attributi e i dati dei checks.
  - Point detail: Se si selezionano gli attributi, i controlli generali o i controlli cosmetici, nella scheda Dettaglio punto è possibile visualizzare diverse risorse grafiche. Mappa di calore per i controlli estetici o grafico di tendenza per i check numerici.
  - Quick report: opzione per generare un report basato sul modulo precedentemente progettato nel programma partner di Control Guide.

Tutti i filtri utilizzati al punto (1) saranno applicati ai dati, al Points detail o al Quick Report.


# Sfruttamento delle informazioni Data & Measurement

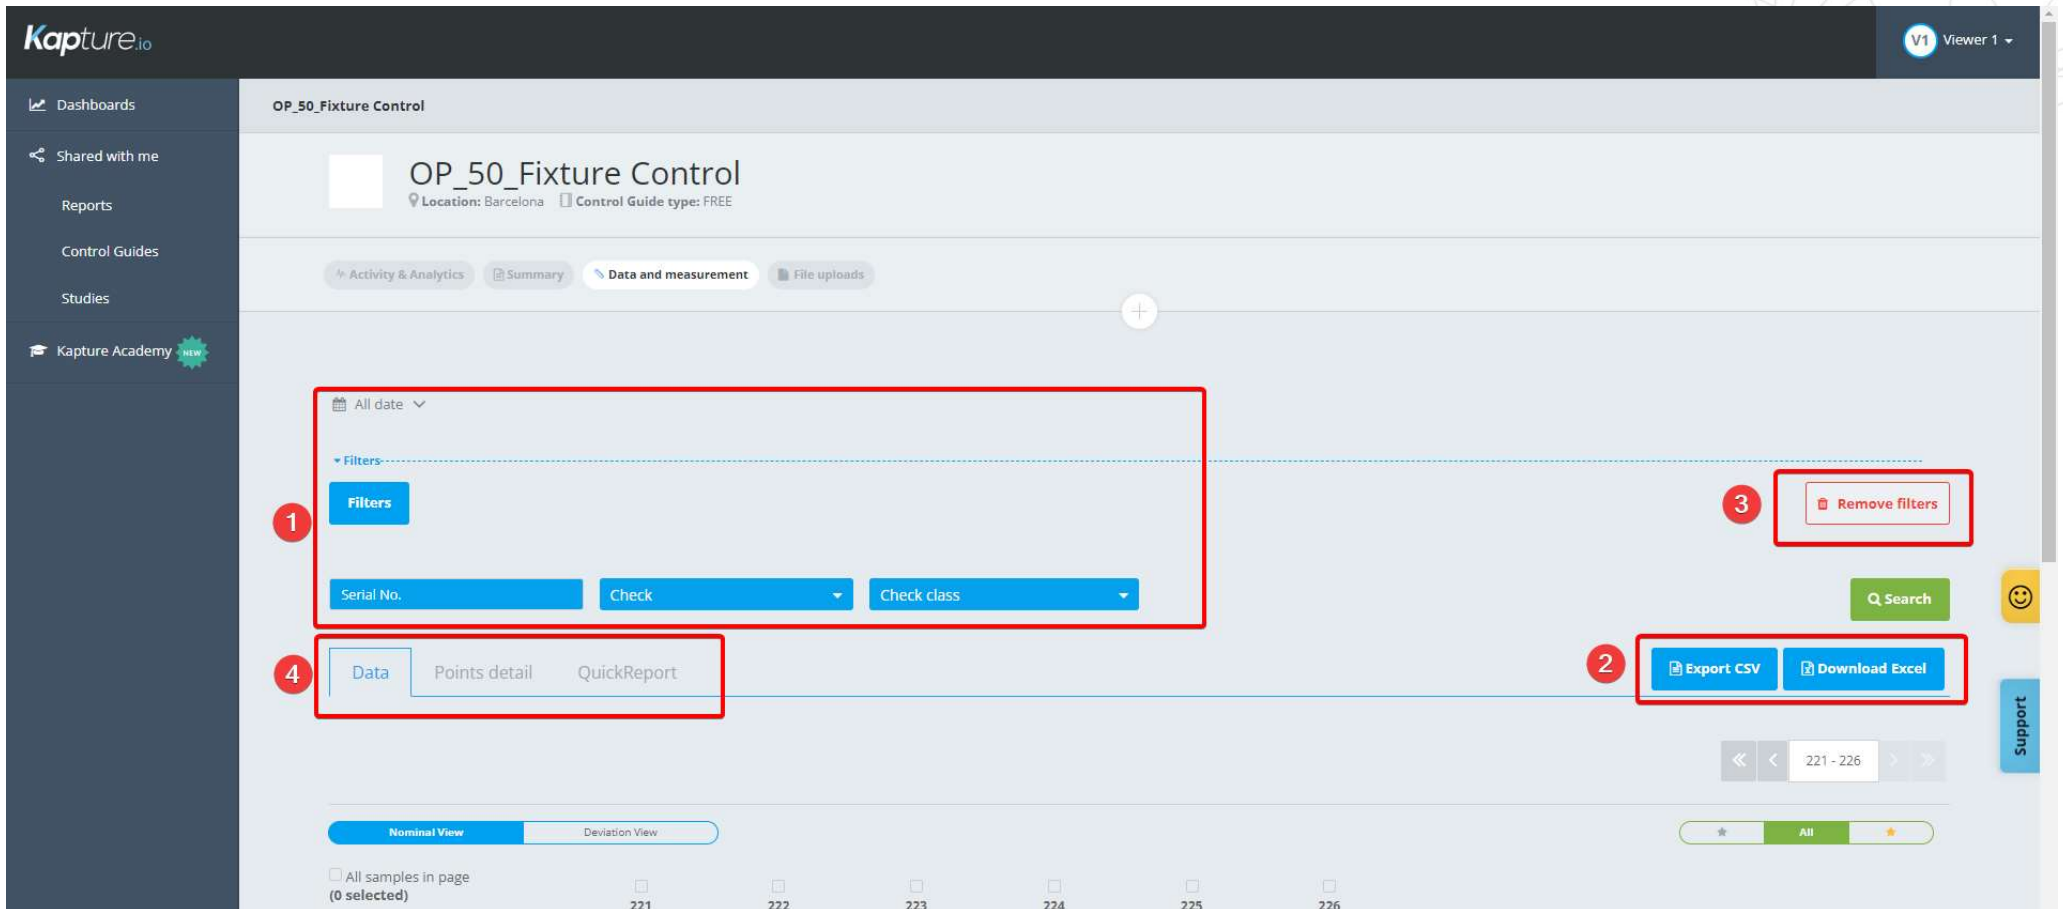

The screenshot displays the 'Data and measurement' section of the Kapture.io interface for a control guide titled 'OP\_50\_Fixture Control'. The interface includes a sidebar with navigation options like 'Dashboards', 'Reports', and 'Control Guides'. The main content area features a header with the control guide name and location, followed by tabs for 'Activity & Analytics', 'Summary', 'Data and measurement', and 'File uploads'. A red box labeled '1' highlights the 'Filters' section, which includes a date selector, a 'Filters' button, and dropdown menus for 'Serial No.', 'Check', and 'Check class'. A red box labeled '2' highlights the 'Export CSV' and 'Download Excel' buttons. A red box labeled '3' highlights the 'Remove filters' button. A red box labeled '4' highlights the 'Data', 'Points detail', and 'QuickReport' tabs. At the bottom, there are view toggles for 'Nominal View' and 'Deviation View', a checkbox for 'All samples in page', and a table of sample numbers (221-226).


# Kapture.IO


*Intelligent Quality Management System (QMS)*

 [sales@kapture.io](mailto:sales@kapture.io)

 [www.kapture.io](http://www.kapture.io)

 [Kapture.io](https://www.linkedin.com/company/kapture-io)

 [@Kapture\\_io](https://twitter.com/Kapture_io)

 [@kapture.io](https://www.instagram.com/kapture.io)

 [Beacons.ai/kaptureio](https://beacons.ai/kaptureio)

**Kapture.io**

